


MERLYN

6|series sleek

1 DOOR QUADRANT

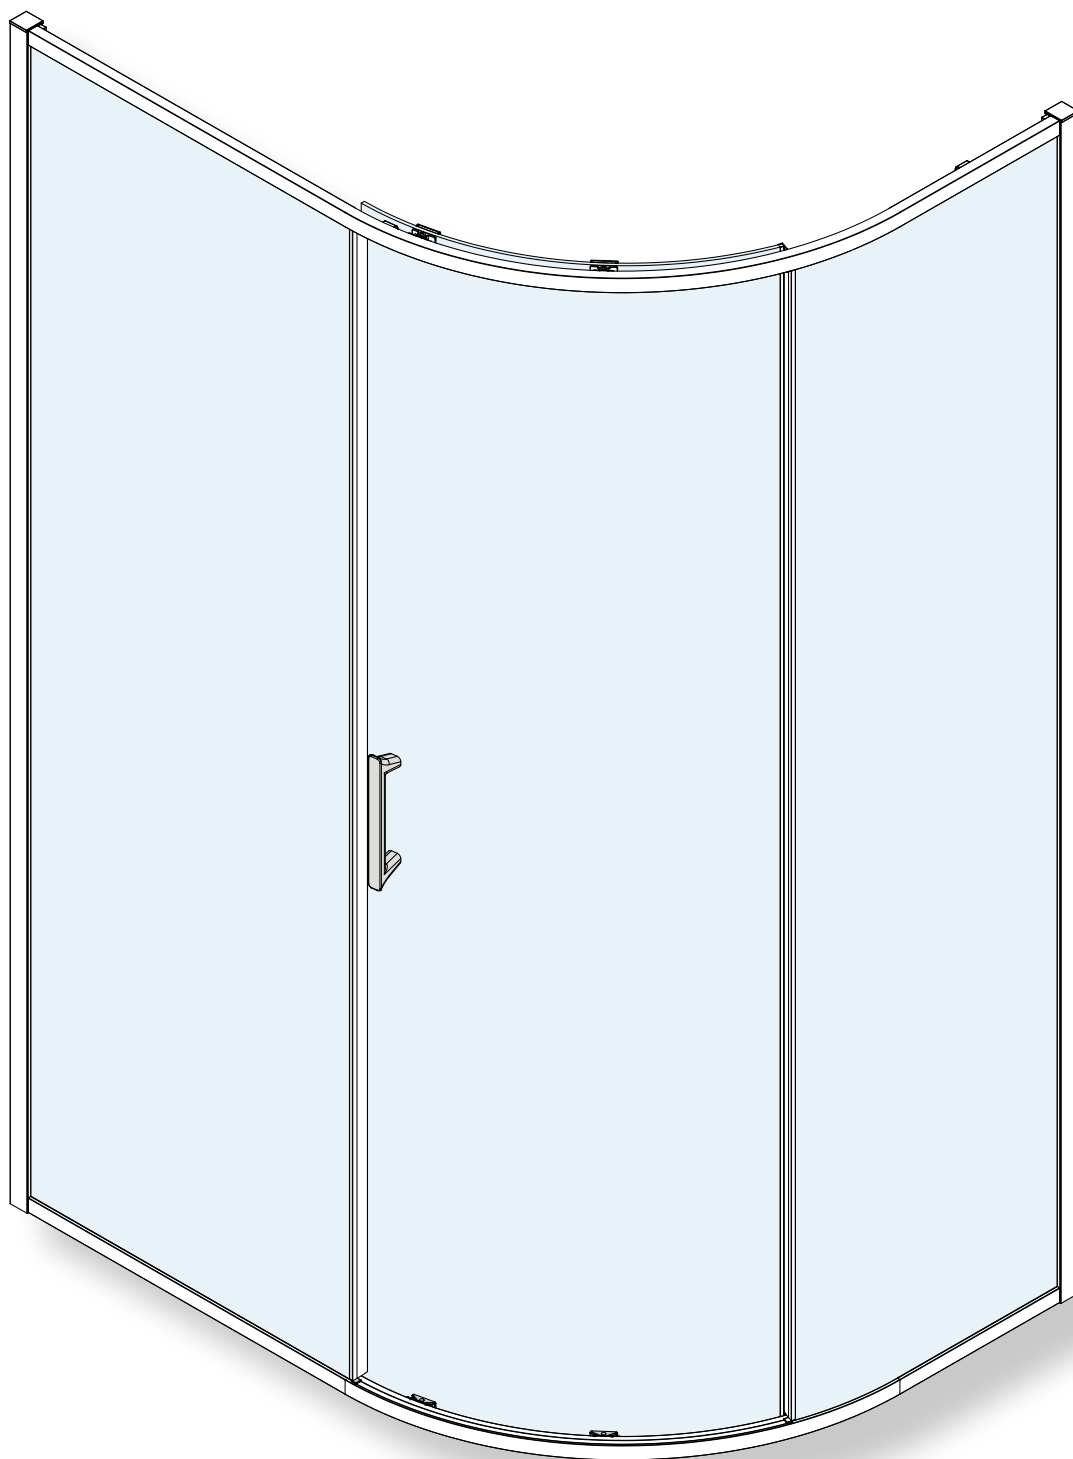

INSTALLATION GUIDE

IMPORTANT:


**Please read the complete instructions
before commencing fitting.**

Make sure the tray is 100% level in all directions.
Do Not attempt to install the product unless you
can tick all 4 boxes satisfactorily.




- Check that you have the tools required ☐
- Check the installation site is compatible with
the sizes of door supplied ☐
- Check all the enclosure components are present ☐
- Check the installation kit is complete ☐

The wall plugs supplied with the installation kit are
for use in solid walls. Hollow or 'stud partition'
walls will require alternative fixings. Please consult
a hardware supplier for the correct type.
It may also be necessary to consult your tiling
supplier about the correct method for drilling
your tiles.


**ATTENTION: TAKE EXTREME CARE WHEN
HANDLING GLASS, WEAR PROTECTIVE EYEWEAR
AND CLOTHING. DO NOT LEAVE THE GLASS ON
HARD SURFACES AND AVOID CONTACT BETWEEN
THE GLASS EDGES AND HARD SURFACES OR
IMPACTS DURING THE INSTALLATION.**

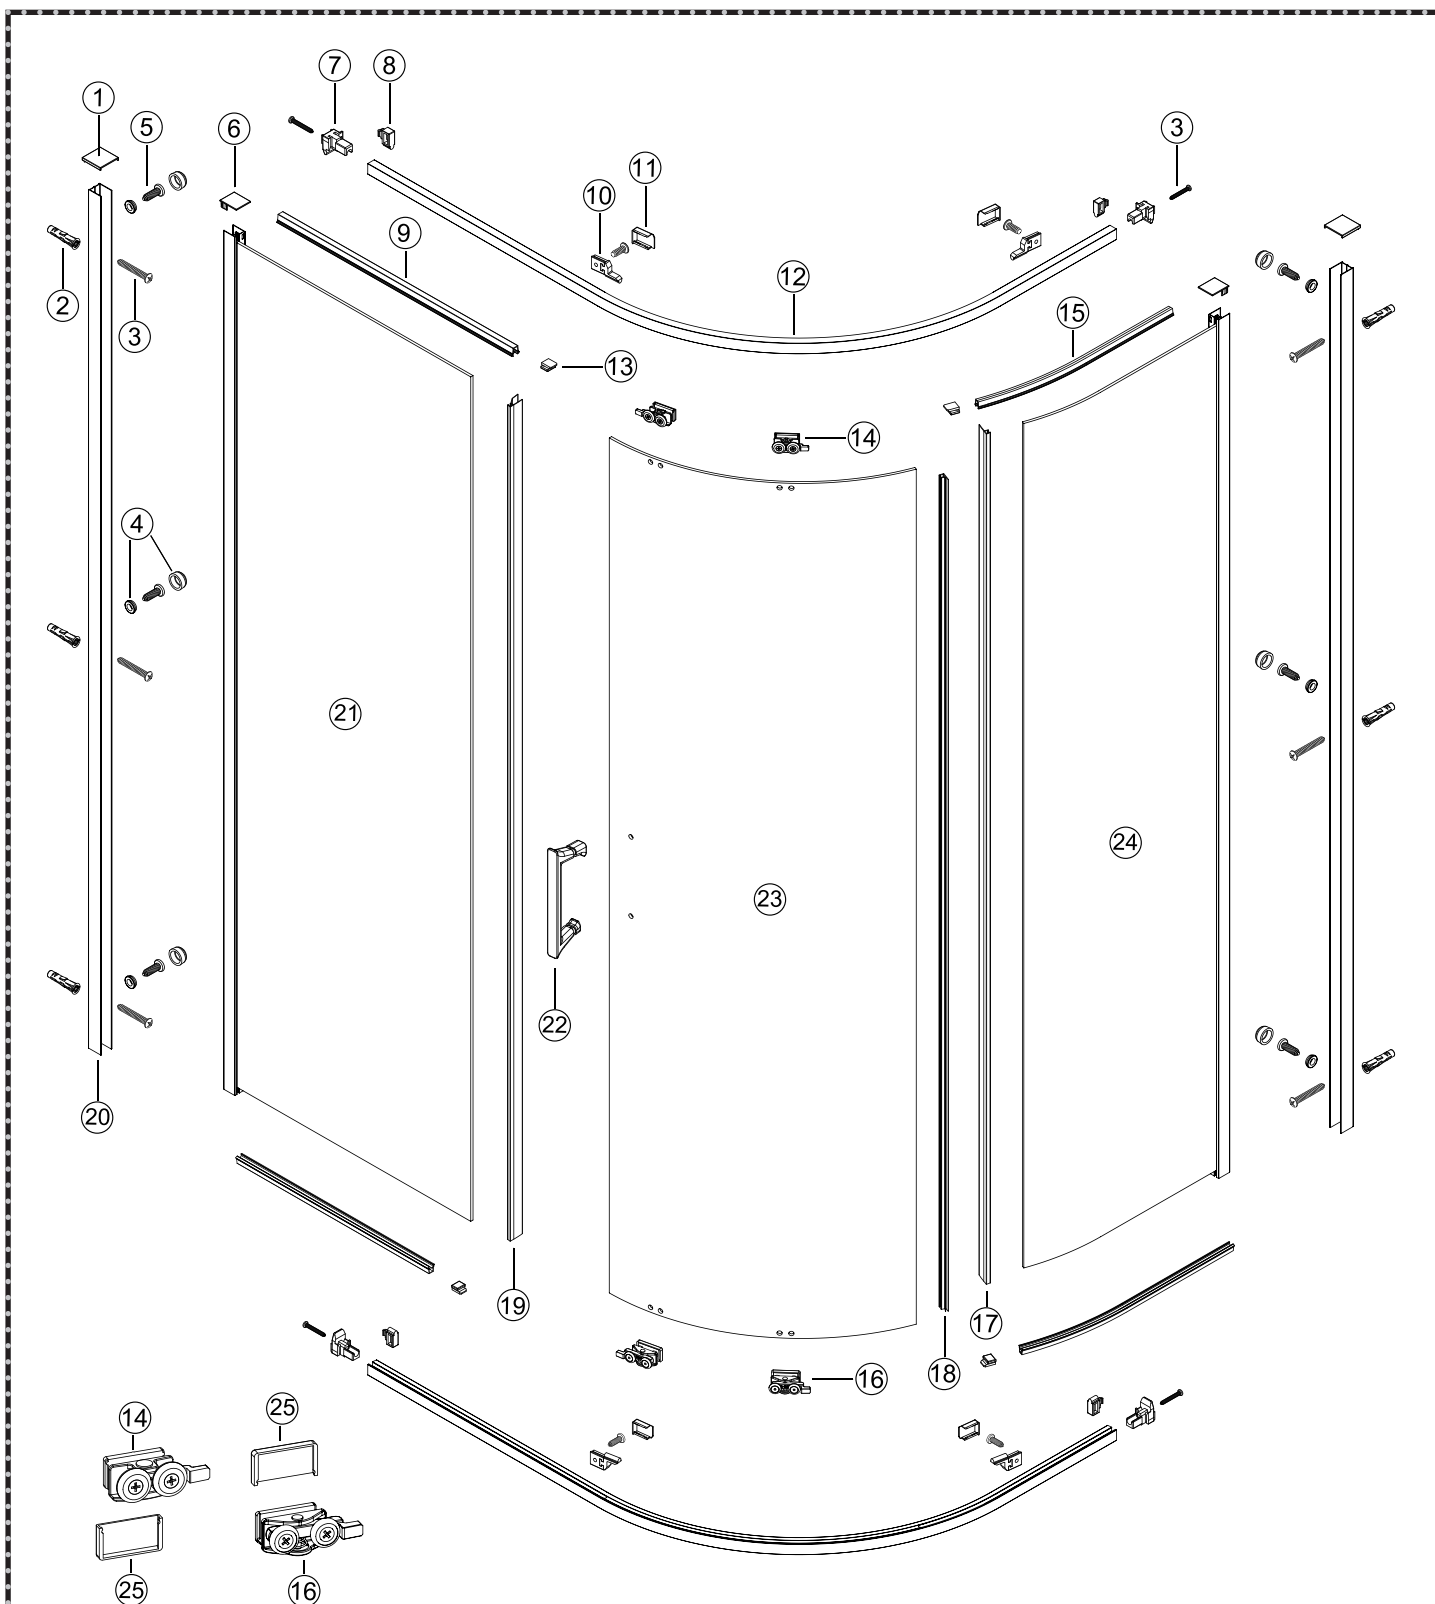

No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number
①	1	Wall profile cover cap	SP0SS6026	⑩	2	Cushioned stop	SP0SS6034	⑲	1	Closing seal	SP0SS6012
②	6	Wall plug	A03S0090	⑪	2	Stop cover cap	SP0SS6036	⑳	2	Wall profile	SP0SS6001
③	6	4x30 screw	A03S0089	⑫	1	Top/Bottom rail	A	㉑	1	Fixed panel	B
④	6	Screw cover cap & clip	SP0SS6028	⑬	4	Fixed panel clip	SP0SS6031	㉒	1	Handle	SP0SS6029
⑤	6	4x10 screw	SP0V4110	⑭	1	Top roller set	SP0SS6021	㉓	1	Moving panel	C
⑥	2	Frame cover cap	SP0SS6027	⑮	2	Curved fixed seal 800/900	SP0SS6039/38	㉔	1	Curved fixed panel	D
⑦	2	Connecting block	SP0SS6032	⑯	1	Bottom roller set	SP0SS6022	㉕	4	Roller cover cap	SP0SS6023
⑧	2	Locking clip	SP0SS6033	⑰	1	Fixed panel seal	SP0SS6013				
⑨	2	Straight fixed seal	SP0SS6040	⑱	1	Moving panel seal	SP0SS6015				

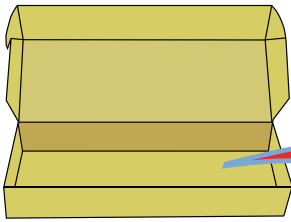


SP0SS6026
X1




SP0SS6027
X2




SP0V4110 X6 SP0SS6028
X6

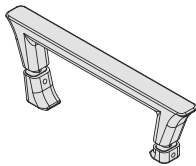


SP0SS6029
X1




A03S0089
X6




A03S0090
X6





SP08S1300511
X1





SP08S1301152
X1







SP0SS6021
X1




SP0SS6022
X1



SP0SS6023
X4

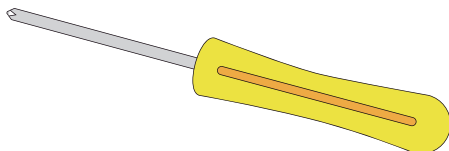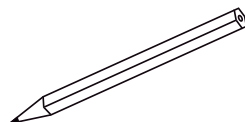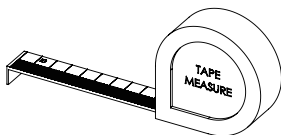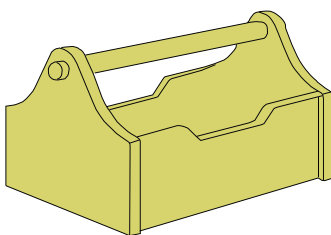

PH2

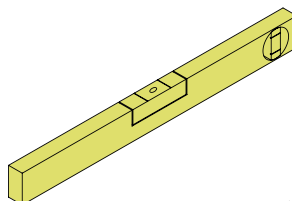

∅6






1


Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray.

Do not angle out bottom tile.
TRAY MUST BE LEVEL IN ALL DIRECTIONS!


TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

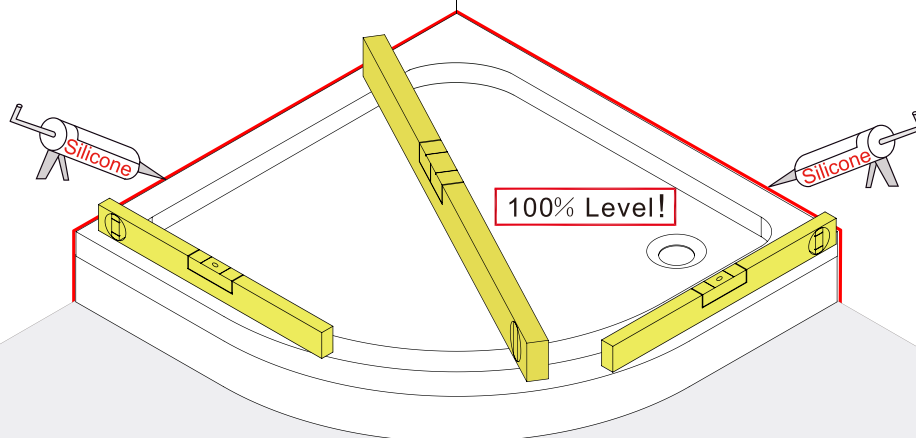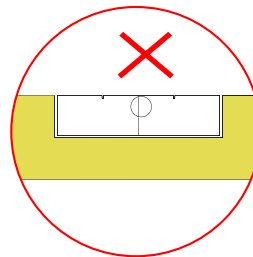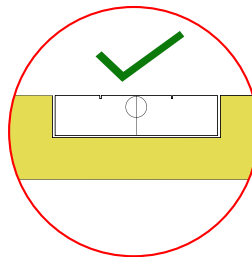


2

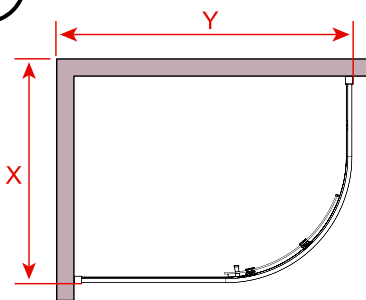


Size	X	Y
900x900	870-890	870-890
1000x1000	970-990	970-990
1000x800	970-990	770-790
1200x800	1170-1190	770-790
1200x900	1170-1190	870-890

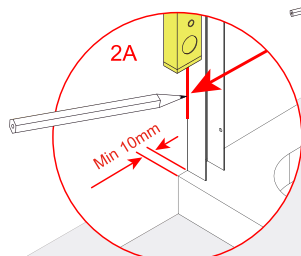

2A

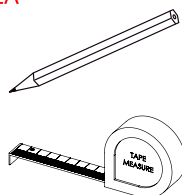


2B

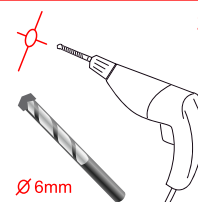




2C



2D

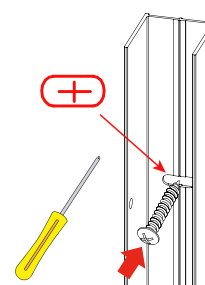

3

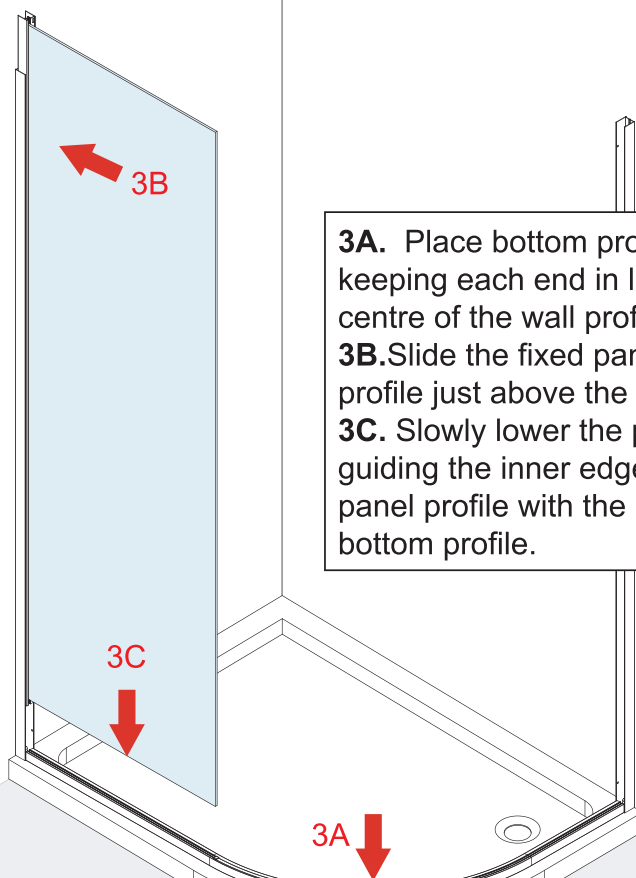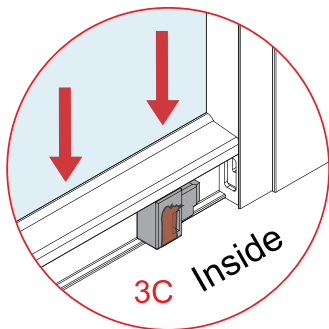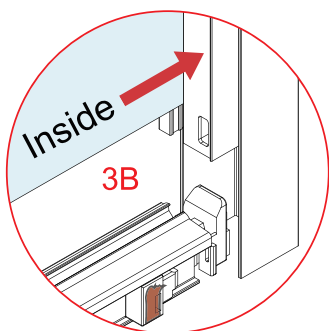

3A. Place bottom profile on the tray keeping each end in line with the centre of the wall profiles.




3B. Slide the fixed panel into the wall profile just above the bottom profile.

3C. Slowly lower the panel while guiding the inner edge of the fixed panel profile with the end of the bottom profile.




4

4A. Slide the fixed panel into the wall profile just above the bottom profile.






4B. Slowly lower the panel while guiding the inner edge of the fixed panel profile with the end of the bottom profile.

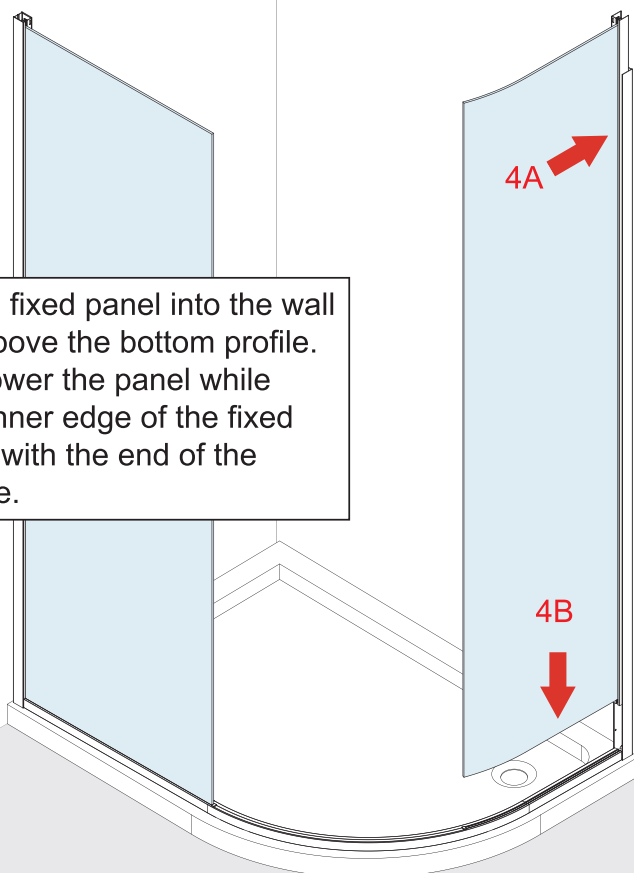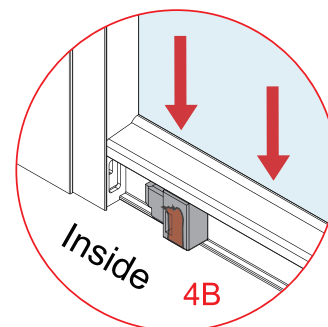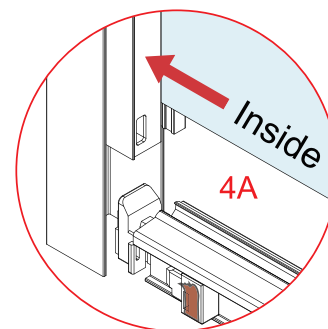




5

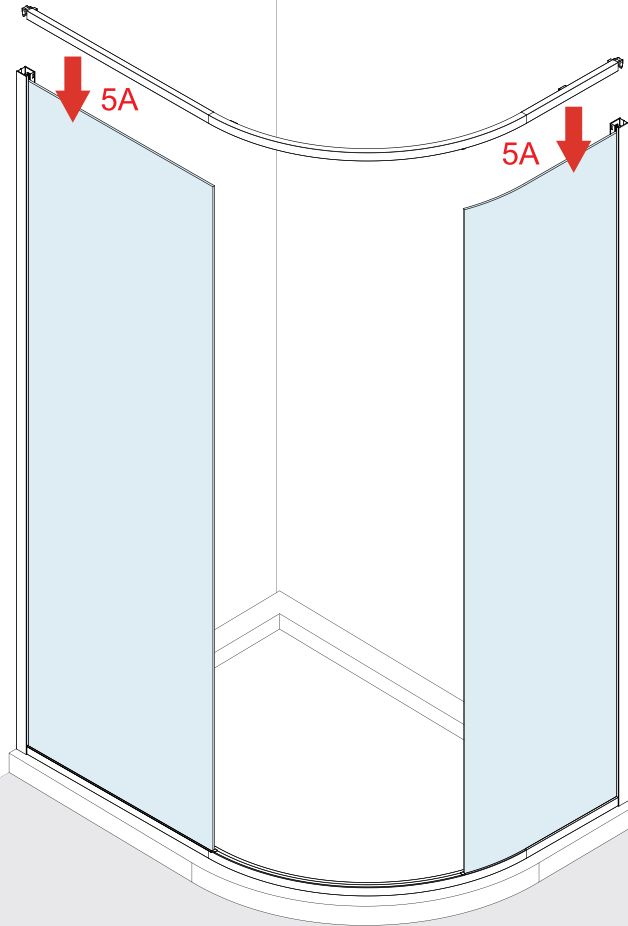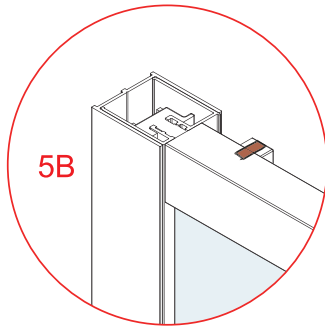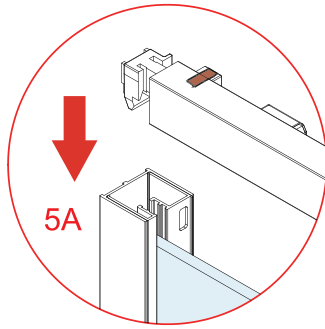






6

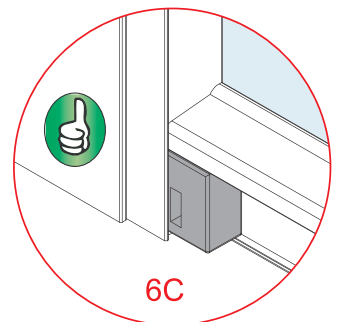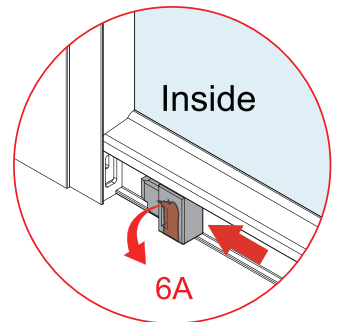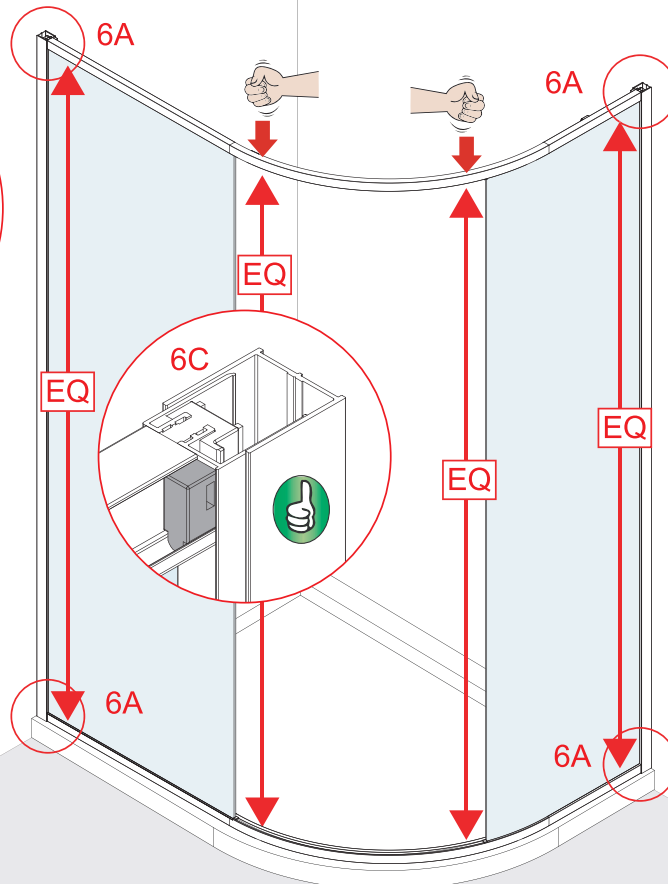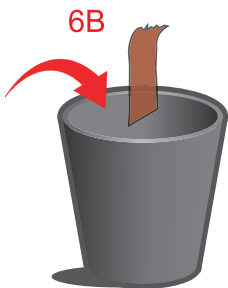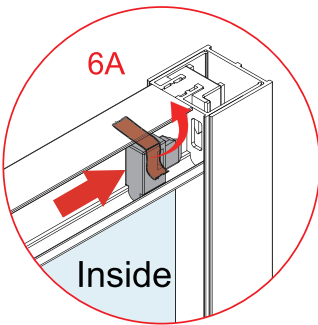

7

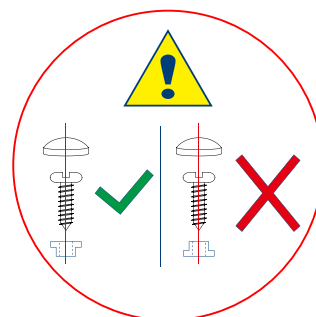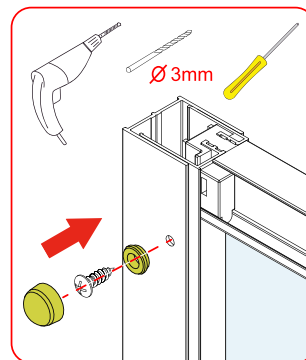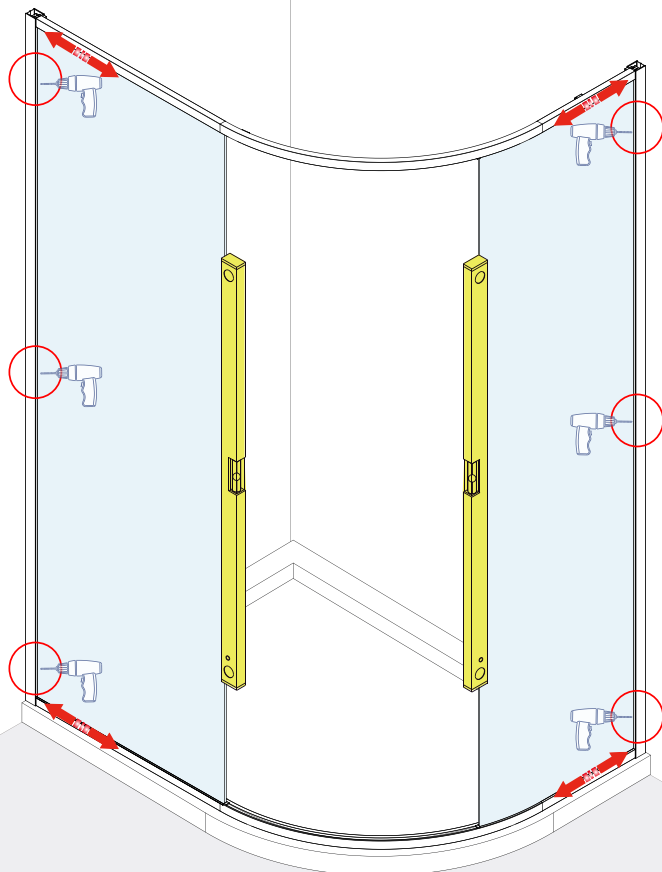

8

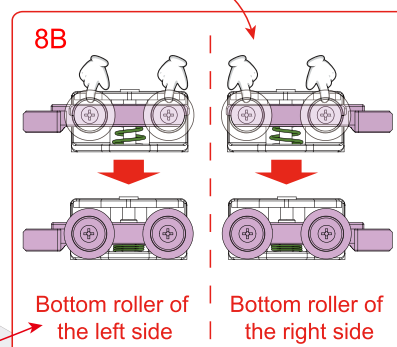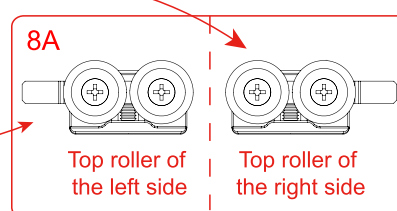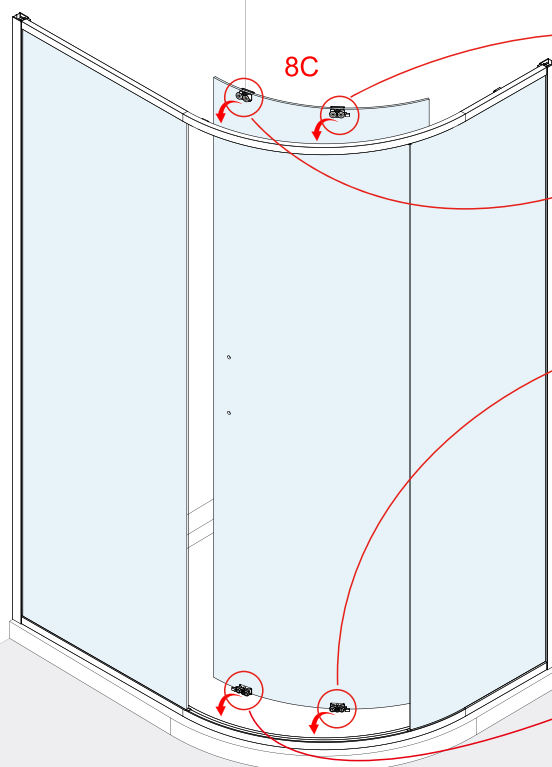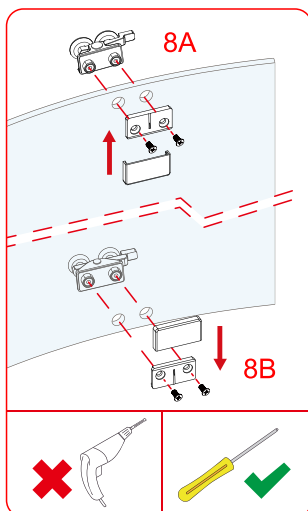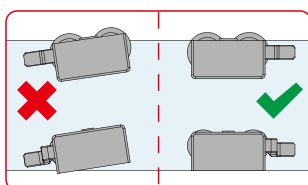

9

9B

1. Apply a bead of silicone to the edge and outside of the fixed panel where it meets the bottom profile.


2. Slide the clip tight to the edge of the glass.

3. Fit the end of the notched seal to the bottom first ensuring no gap between the top of the clip and the seal.




9B

9C


9A

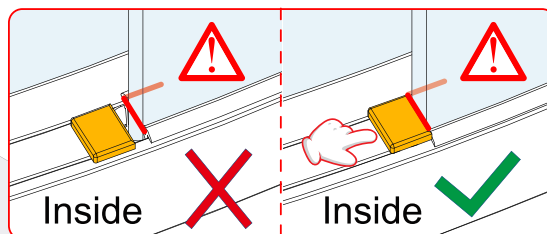


10

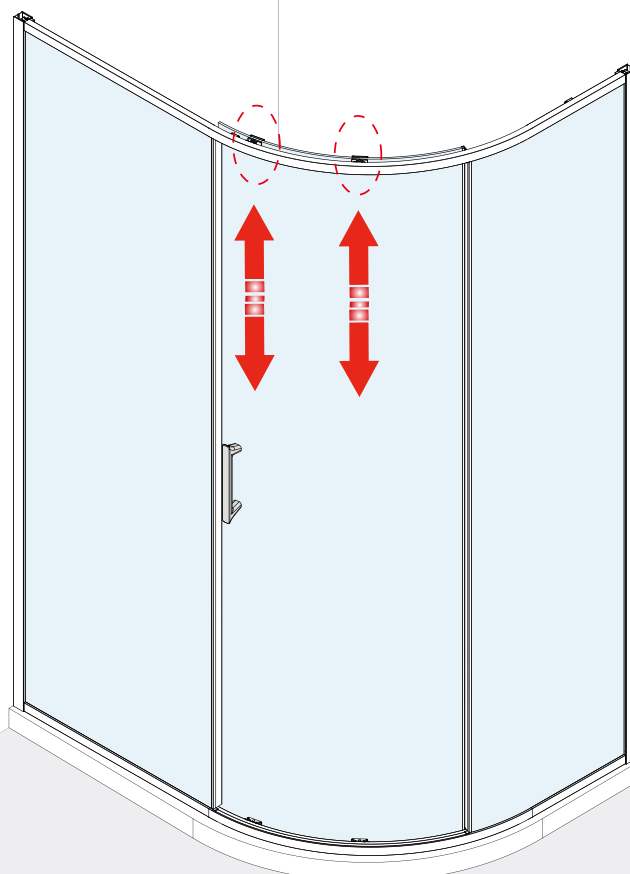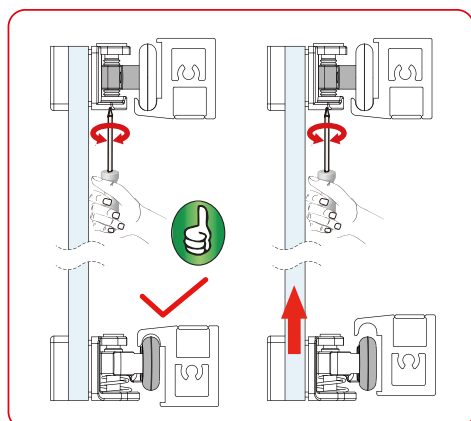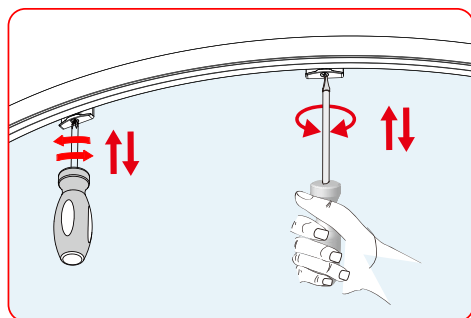

11

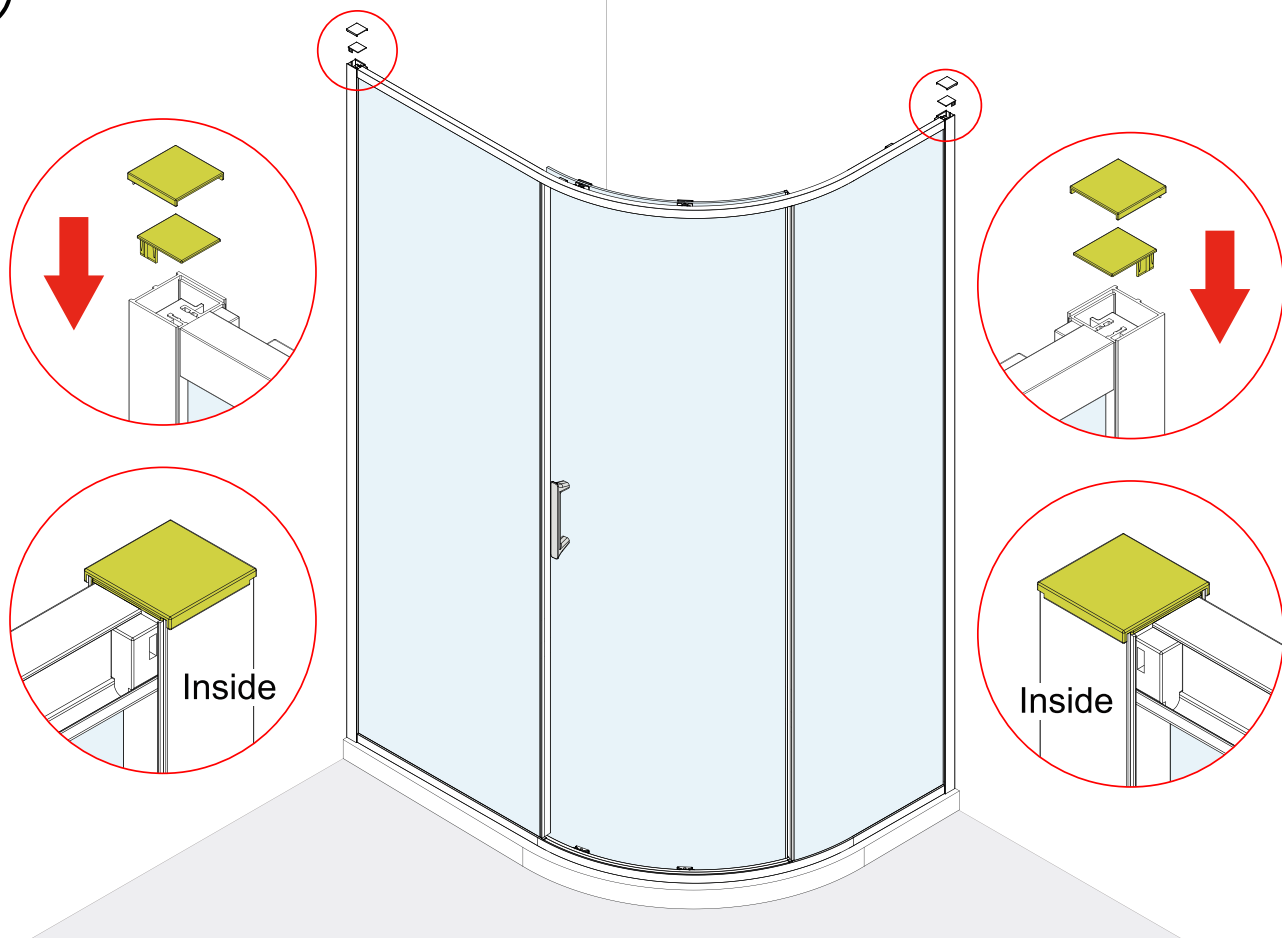

12

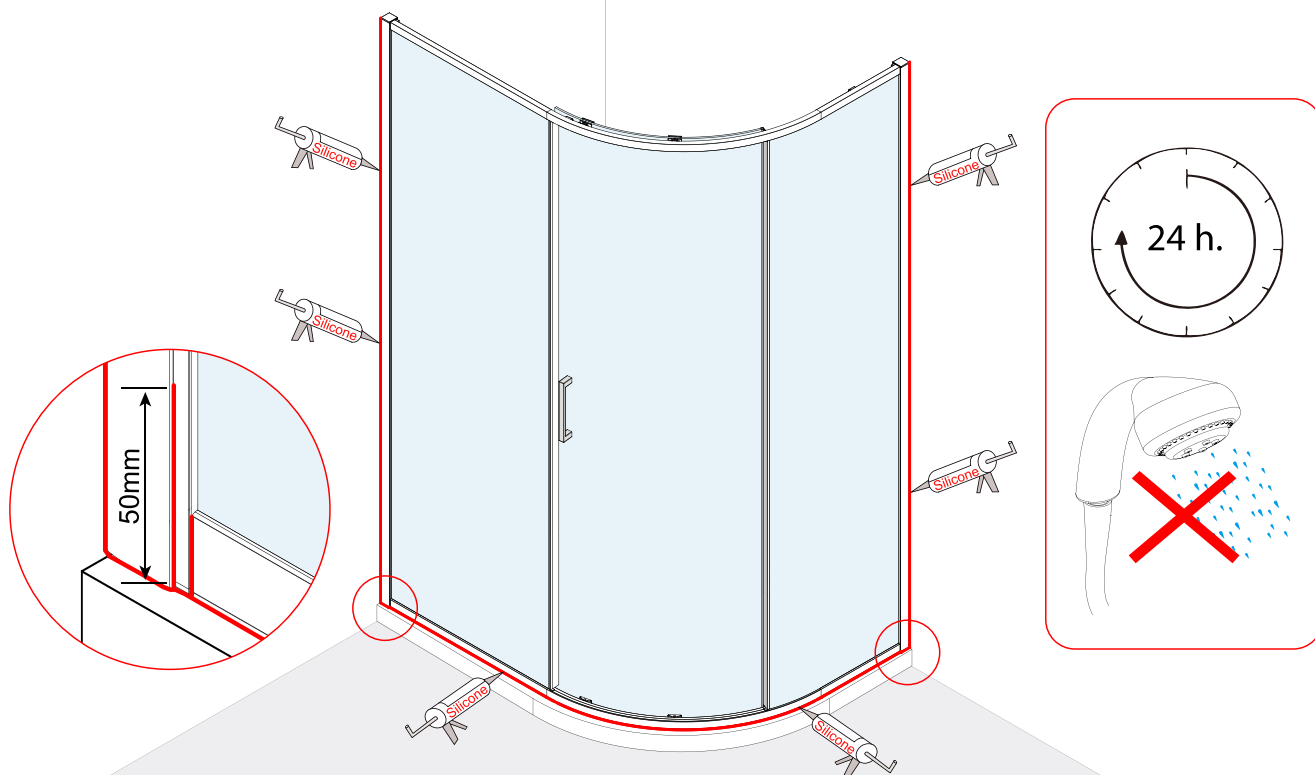

CLEANING

It is important to clean your Merlyn shower door after every use. Wipe down all the glass and metal parts with a soft cloth. Do not allow lime scale to build up in hard water areas. Ensure that any residual water on the glass is removed after every use.

- Clean the glass regularly using soapy water.
- Do not use abrasive products on any surfaces.

Chrome is vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners, hair dyes, wine making chemicals and photographic chemicals may contain acid. These materials may have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.

TROUBLE SHOOTING

Door Not functioning properly

1. Is the tray 100% level? (step 1)
2. Do the finished tile measurements fall within the adjustment X and Y listed on (step 2)?
3. Are the wall profiles plumb?(step 2)
4. Is the frame loose? Check the locking clips are pushed fully into the slot in the frame and packaging tape has been removed?(step 6)
5. Moving panel not coming to a cushioned close, check the rollers are fitted with the extend roller arm facing the edge of the glass, not the middle. (step 8)
6. Check the bottom rollers are seated correctly in the channel see. (step 10)

Door Leaking

1. Was the tray adequately sealed before the enclosure was installed?(step 1)
2. Are the upright seals fitted correctly? (step 9)
3. Has the joint at the bottom of the fixed panel and the clip on the bottom of the frame been sealed correctly?(step 9)
4. Is the edge of the moving panel closing evenly to the upright seal? If there is an uneven gap top to bottom adjust the top rollers. (step 10)
5. Is the door sealed correctly ? (step 12)

To download the Declaration of Performance (DOP) for this product
please use the link below.

<https://merlynshowering.com/aftersales-support/dop-certs/>

For further information please contact: IRL:0567791555 UK:08081011429